


ENGLISH Candy Microwave

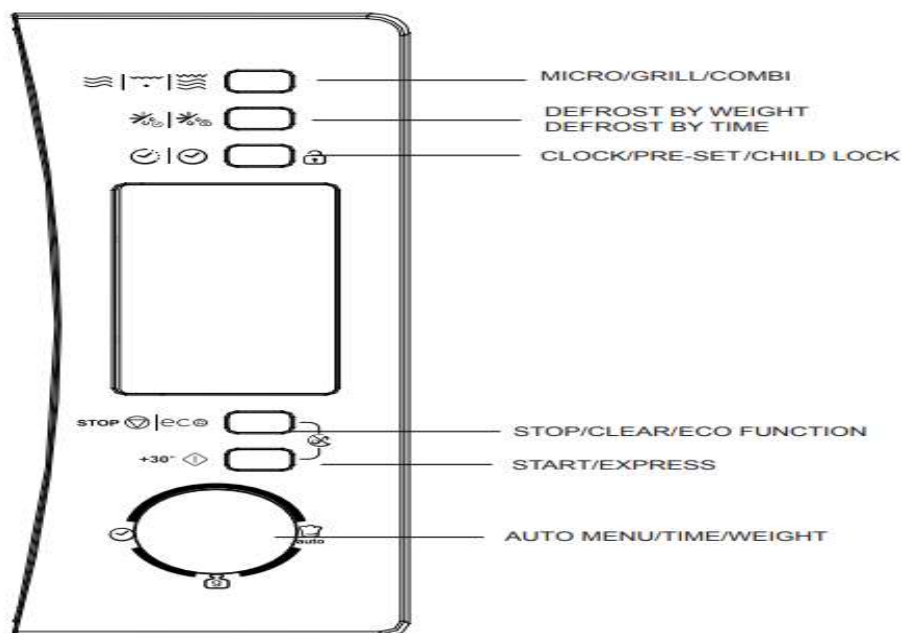

1. Clock Setting

When the microwave oven is electrified, the oven will display "0:00", buzzer will ring once.

- 1) Press " ", the hour figures will flash.
- 2) Turn " " to adjust the hour figures, the input time should be within 0-23.
- 3) Press " ", the minute figures will flash.
- 4) Turn " " to adjust the minute figures, the input time should be within 0-59.
- 5) Press " " to finish clock setting. ":" will flash.

Note: 1) If the clock is not set, it would not function when powered.
2) During the process of clock setting, if you press " STOP " or no operation in one minute, the oven will exit the setting.

2. Microwave Cooking

Press " " once, "P100" displays. Then turn " " to select the function you want. Press "+30" " to confirm the power. Turn " " to adjust the cooking time. Press "+30" " to start cooking.

Example: If you want to use 80% power to cook for 20 minutes, you can operate the oven as the following steps.

- 1) Press " " once, the LED will display "P100", " " indicator will be lighted.
- 2) Turn " " to choose 80% power, the LED will display "P80". Press "+30" " to confirm power.
- 3) Turn " " to adjust the cooking time until the oven display "20:00" (The maximum cooking time is 95 minutes.)
- 4) Press "+30" " to start cooking, ":" will light and the " " indicator will flash (Buzzer will sound five times after finishing).

NOTE: the step quantities for the adjustment time of the coding switch are as follow:
 0—1 min : 5 seconds 10—30 min : 1 minute
 1—5 min : 10 seconds 30—95 min : 5 minutes
 5—10 min : 30 seconds

Microwave Power Chart

Microwave Power	100%	80%	50%	30%	10%
-----------------	------	-----	-----	-----	-----

3. Grill Cooking

- 1) Press the " " key twice, "G" displays and grill function is selected. Press "+30" " to confirm power.
- 2) Turn " " to adjust the cooking time. The maximum cooking time is 95 minutes.
- 3) Press the "+30" " key to start cooking. The " " will flash, ":" will be lighted.

4. Combination Cooking

- 1) Press the " key twice, "G" displays.
- 2) Turn " to select "C-1" or "C-2". Press "+30" " to confirm the power.
- 3) Turn " to adjust the cooking time. (The maximum cooking time is 95 minutes.)
- 4) Press "+30" " key to start cooking. The cooking indicators will flash and ":" will light.

5. Speedy Cooking

- 1).When the oven is in the waiting states, press "+30" " key to start cooking with full microwave power for 30 seconds. The cooking time will add 30 seconds by every press on "+30" " key, and the maximum setting time is 95 minutes.
Note: Time can be increased by press "+30" " button except weight defrost and auto menu program.
- 2).In waiting state, turn " left to choose cooking time directly then press "+30" " key to cook with 100% microwave power.
This program can be set as the first one of multi-stage.

6. Defrost By Time

- 1) Press " key once, the LED will display "dEF1".
- 2) Turn " to select the cooking time. At the same time, " and " will be lighted. The time setting is from 00:05 to 95:00.
The default power level is P30. It is not adjustable.
- 3) Press "+30" " key to start defrosting.
 " and " indicators will flash.

7. Defrost by Weight

- 1) Press " pad twice, the LED will display "dEF2".
- 2) Turn " to select the weight of food. At the same time, "g" will light.
The weight should be 100-2000g.
- 3) Press "+30" " key to start defrosting.
 " and " indicators will flash and "g" indicator will go out.

8. Auto Menu

- 1). In waiting states, turn " right to choose the menu you need.
"A-01", "A-02"... "A-10" will display in order.
- 2) Press "+30" " to confirm the selected main menu.
- 2). Turn " to select the menu from b-1 to b-4.
- 3) Press "+30" " to start cooking.
When cooking finish, buzzer will sound five times. If the clock has been set before, the current time will be displayed, otherwise, 0:00 will be displayed.
For example: to cook the pasta.
- 1) Turn " right until "A-07" displays and pasta menu is selected.
 " and " indicator will light.
- 2) Press "+30" " to confirm the selected main menu.
- 3). Stop turning " when "b-4" displays.
- 3) Press "+30" " to start cooking.
When cooking finish, buzzer will sound five times. Then turn back to waiting states.

9. Multi-Stage Cooking

Two stages of cooking can be maximumly set. If one stages is defrosting, it will be put in the first stage automatically. The buzzer will ring once after each stage and the next stage will begin.

Note: Auto menu cannot be set as one of the multi-stage.

Example: if you want to defrost the food of 500g + 80% microwave power for 5 minutes

The steps are as following:

- 1) Press " twice, "dEF2" displays;
- 2) Turn " to adjust the weight of the food. Stop turning when "500" displays;
- 3) Press " once, turn " to choose 80% microwave power;
Press "+30" " to confirm the power;
- 4) Turn " to adjust the cooking time of 5 minutes;
- 5) Press "+30" " to start cooking.

Note: When the first stage finish, buzzer sounds once then the second stage begins. When all of them finish, buzzer sounds five times and the unit turn back to the waiting states.

10. Pre-set Function

- 1) Set the clock first. (Consult the instruction of clock setting.)
- 2) Input the cooking program. Two stages can be set at most. Defrosting should not be set here.

3) Press " | ". The current clock is displayed. The hour figure flash;

4) Turn "" to adjust the hour figures, the input time should be within 0-23.

12:00

5) Press " | ", the minute figures will flash.

12:00

6) Turn "" to adjust the minute figures, the input time should be within 0-59.

12:05

7) Press " 30" " to finish setting. ":" will light, buzzer will ring twice when the time arrives, then cooking will start automatically.

Note: 1) Clock must be set first. Otherwise, pre-set function will not work.

- 2) If the pre-set program has been set without the cooking program, the whole setting will be used as an alarm clock. That means when pre-set time arrives, buzzer will sound five times only.

11. ECO Function

In waiting state, Press " | " once or if no operation in 1 minute, the screen will be off. At this time, press any button to turn the screen on.

Note: 1). The oven cannot enter ECO mode if the door is open.

2). Press any button or open the door to turn the screen on under ECO mode.

3). If enter ECO mode under child lock state, recover to still child lock state.

12. Silent Mode

In waiting states, press " | ", and then press " 30" " simotanoesly in 3 seconds to enter silent mode. All the buttons and buzzers will stop ringing under silent mode.

To active the sound: in waiting state, press " | ", and then press " 30" " simotanoesly in 3 seconds to exit the silent mode.

13. Inquiring Function

(1) In cooking state, press " | ", the current microwave power will be displayed for 3 seconds.

(2) In pre-set state, press " | " to inquire the time for delay start cooking.

The pre-set time will flash for 3 seconds, then the oven will turn back to the clock display.

(3) During cooking state, press " | " to check the current time. It will be displayed for 3 seconds.

14. Lock-out Function for Children

Lock: In waiting state, press " | " for 3 seconds, there will be a long "beep" denoting entering into the children-lock state and LED will display " " and " " will light.

Lock quitting: In locked state, press " | " for 3 seconds, there will be a long "beep" denoting that the lock is released, and LED will turn back to the clock stae, " " will go out.

15. Protection of Fan

When the microwave or combination cooking works over 5 minutes, it stops working at the last 15 seconds, only fan runs.

16. Protection Function of Magnetron Control Pipe

When the unit runs for 30 minutes with high power level, it will adjust to 80% microwave power to protect the magnetron control pipe.

This function works under multi-stage and other states.

17. Specification

- (1) The buzzer will sound once when turning the knob at the beginning;
- (2) " 30" " must be pressed to continue cooking if the door is opened during cooking;
- (3) Once the cooking programme has been set, " 30" " is not pressed in 1 minute. The current time will be displayed. The setting will be cancelled.
- (4) The buzzer sounds once by efficient press, inefficient press will be no response.